



MA- 854 LED KEYPAD OPERATIONS (Magnum Alert)

1. Setting the Alarm When Leaving.

1. Check to see that the keypad displays a STEADY GREEN light. This indicates that all openings are closed and properly secured.
2. Enter your four digit security code (PIN). The light will go from GREEN to RED, I I indicating that the system is armed. Exit immediately.

2. Zone Fault

1. If the GREEN light is flashing, this indicates that the system is not ready, and that a protected zone is open or in trouble. To identify the open or trouble zone, press and hold the **3** key until it beeps. The number of the zone will be displayed in the LED window. **Re-check and properly secure the opening whose zone number is displayed.** Then follow the procedure explained in Section I above.

3. Bypass

1. If you are unable to clear a zone fault or zone trouble, then you must bypass the zone number displayed. At the keypad, press the "S" key, followed immediately by the single-digit zone number displayed in the window.
2. When a zone is bypassed, the keypad will display a YELLOW light, **and** a STEADY GREEN light.
3. After correctly bypassing a trouble zone, you may arm your system as usual. In addition, please notify the **API** Operator that service may be needed.

4. Disarming the System

1. After entering, immediately enter your security code (PIN) at the keypad. The LED light will change from RED to GREEN, indicating that the system has been disarmed.
2. If you accidentally cause an alarm by disarming the system incorrectly, then **YOU MUST CALL THE API CENTRAL STATION IMMEDIATELY**, and identify yourself using proper ID and telling the Operator the **NAME** of the business you are calling from. Failure to do so may result in the report of an emergency to the police department having jurisdiction.

5. User Program/Changing User Codes (PIN) Numbers

1. Press and hold the "8" key until it beeps. Enter program code 654321 or 123456. All lights will now flash and keypad will beep continuously.
2. Select the User number by entering the "S" key, or BYPASS key, followed by numbers 1 through 4. For example S1 is system User #1. Enter your new 4 digit PIN number or none for any PIN number, and press the "S" key or BYPASS Key to enter. Program mode. **Do not use PIN numbers beginning with "8" or containing "0"**.

6. Testing Your System/Use Of System

1. **Test your system regularly** if you have questions about the procedure for testing or using your system then call **API**