



MA- 1008/1008e LED Keypad Operation

1. **SETTING THE ALARM WHEN LEAVING:**

1. Check to see that the keypad displays a STEADY **GREEN** light. This indicates that all openings are closed and properly secured.
2. Enter your four digit security code (PIN). The light will go from **GREEN** to **RED**, indicating that the system is armed. Exit immediately.

2. **ZONE FAULTS:**

1. If the **GREEN** light is flashing, this indicates that the system is not ready, and that a protected zone is open or in trouble. To identify the open or trouble zone, press and hold the **3** key until it beeps.

The number of the zone will be displayed in the LED window. **Re-check and secure the opening whose zone number is displayed.** Then follow the procedure explained in Section 1 above.

3. **BYPASS:**

1. If you are unable to clear a zone fault or zone trouble, then you must bypass the zone number displayed. At the keypad, enter the number of the zone displayed and press the BYPASS key.
2. When a zone is bypassed, the keypad will display a YELLOW light, **and** a STEADY **GREEN** light.
3. After correctly bypassing a trouble zone, you may arm your system as usual. In addition, please notify the **API** Operator that service may be needed.

4. **DISARMING THE SYSTEM:**

1. After entering, immediately enter your security code (PIN) at the keypad. The LED light will change from **RED** to **GREEN**, indicating that the system has been disarmed.
2. If you accidentally cause an alarm by disarming the system incorrectly, then **YOU MUST CALL THE API CENTRAL STATION IMMEDIATELY**, and identify yourself using your passcode, and telling the Operator the **NAME** of the business you are calling from. Failure to do so may result in the report of an emergency to the police department having jurisdiction.

5. **USER PROGRAMMING – CHANGING USER PIN AT THE KEYPAD**

1. Press and hold the “8” key until it beeps. Enter program code 654321. All lights will now flash and keypad will beep continuously.
2. Select the User number by entering the “S” key, followed by a number from 1 to 4. For example, S1 is System User #1.
3. Enter your new 4 digit PIN number. **Do not use PIN numbers beginning with “8” or containing “0” (Zero).**
4. Repeat steps 2 and 3 for each PIN number. Press the “S” twice to exit program mode.

MA- 1008/1008e LED Keypad Operation

IMPORTANT NOTE: Keypad models will vary. If you do not see a key marked "S", then look for a key marked "Bypass". If you are still unable to identify the correct key, then call API for technical support.

6. SPECIAL FEATURE: USE WITH EXTREME CAUTION

1. **Keypad Panic** If you feel you are in danger, or under armed robbery assault, you may summon help by pressing the **STAR** and **POUND (* and #)**, **OR, on some keypad models, the "P" and Pound key (P and #)** at your keypad **simultaneously** for at least two seconds.

IMPORTANT NOTE:

2. **Ambush** If you have been **forced** to disarm the alarm system against your will, at your keypad, enter **88, then your security (PIN) number**. This will transmit a signal indicating that you have been forced to disarm the alarm system. This feature works **ONLY** upon disarming the system.

7. Testing Your System/Use Of System - do it regularly – Call API MGR for questions