



## MAGNUM ALERT 3000(MA3000)/GEMINI LCD KEYPAD OPERATION

### USER INSTRUCTIONS

#### 1. SETTING THE SYSTEM WHEN LEAVING:

1. Check the keypad; only the green light should be on and the display must read SYSTEM READY.
2. Make sure that all doors and windows connected to the system are properly closed and secured.
3. Enter your 4 digit PIN number and press ON to arm the system. The light will change from green to red, indicating that the system is arming.
4. Exit immediately.
5. When **global** arming a system with more than one partition (a partition is a separate area), then you Must enter "9, then \*, then your 4 digit PIN number, and press the ON/OFF key; to **global** disarm, press "0", then \*, then your 4 digit PIN number, and press the ON/OFF key. When **global** arming, if a zone in any other area is open or in trouble, the keypad will display the message "Can't arm system – Zones in area? In trouble".
6. To change areas from any keypad enter your PIN and press Area #, then \*, then On/Off. For example, to change to Area 2 from the keypad in Area 1 the keypad command will be: **<PIN#> 2 \* ON**

#### 2. SYSTEM FEATURES

##### 1. BYPASS

If the keypad displays ZONE FAULTS, then observe the zone displayed, and check to see that the zone is properly closed and secured. If the zone appears to be closed, then it will be necessary to bypass the zone. At the keypad, enter the number of the zone, then press the BYPASS key. The **BYPASS** icon and **SYSTEM READY** will appear in the display. When arming with a zone bypassed the GREEN status light will flash. This normal, indicating you have bypassed a zone. Then arm the system as usual. In addition, please notify the **API** Operator that service may be needed.

#### 3. SYSTEM TROUBLE

1. Your keypad will warn you when trouble with your system occurs with an audible beep and message at the keypad display. System trouble can be silenced at the keypad by entering your 4 digit PIN, and then pressing the RESET key. This will clear the system trouble currently being reported at the key-pad. A new trouble condition will cause another alarm, and will require that you follow the procedure described above, using your PIN, and the RESET key.

#### 4. CANCELLING AN ALARM:

When you accidentally cause an alarm, a signal is transmitted to **API** central station, and may result in the report of an emergency to the police department. Therefore, you must follow this procedure for cancel in an alarm:

1. Immediately enter your security code (PIN number) and press the OFF key to disarm the system.

## USER INSTRUCTIONS

Page 2 of 2

2. Immediately call **API's** central station at 310/674-7000 and identify yourself using your pass code. You may be asked to provide further identification, such as to verify a telephone number.

### 5. Special Features (Use with Caution)

1. **Keypad Panic** To send a silent emergency armed robbery signal using your keypad, briefly press and hold the **P and Star key (P and \*)** at the same time.

2. **Ambush** to summon help if you are forced to disarm the system, first enter **88**, then your 4 digit PIN number. This will send a silent alarm indicating you have disarmed the alarm system under duress. This feature only functions when DISARMING the system.

**6. Testing Your System** Test your system regularly. If you have questions about the procedure for system testing, then call **API**. If you have questions about the use of your security system, call and speak to an Operator at 310/674-7000.

Note: Keypad styles and configuration can change. If you are not sure which keypad your system is using please call Central Station.

WPUser\3000LCD.Ins      REV 5/2007